

CLEANING AND MAINTENANCE

PHOTOLUMINESCENT TAPE AND RIGID VINYL PRODUCTS

CLEANING

Regular cleaning to remove built up dirt and objects on the signs will ensure the signs will continue performing to expectation.

1. The photoluminescent signage can be wiped clean with a (dry or damp) sponge or cloth. Observation will determine if cleaning is required however a regular clean every 4 to 6 weeks or after particularly heavy use should ensure correct performance.

MAINTENANCE

Ecoglo products should be checked annually to ensure the following:

- All products are still in place as at installation and there is no material damage to any of these products
- All products are clean from general dust build up and any other specific obscuring deposits (ex. Gum)
- All products are clearly visible and not covered up by anything.
- If used for Emergency egress escape path marking all products must mark a clear path and must not be obstructed by physical hazards such as trolleys, machinery etc.
- If products are used for Emergency egress escape path marking, there must have been no change to the configuration of the facility which renders them unusable.
- All lights required to charge Ecoglo products are operating as designed at installation

TEL:888-679-4022
Email: info@ecoglo.us
www.ecoglo.us
241 Main Street, #100
Buffalo, NY 14203
United States

