


# Photoluminescent Exit Sign System Installation Instructions


1

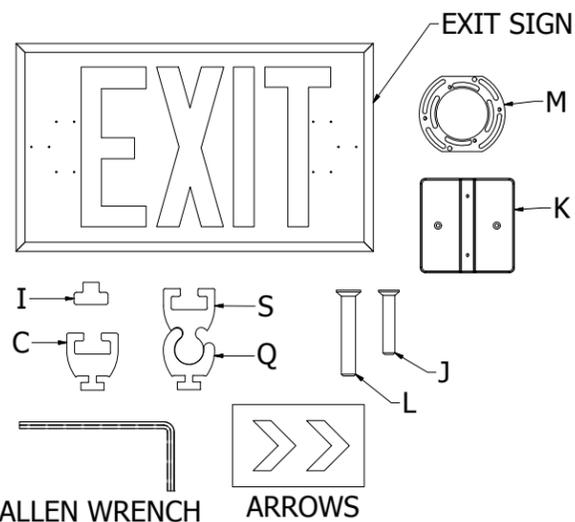

### Parts List

- Exit sign (single sided) - 1
- Standard adaptor (C) - 1
- T Bracket (I) - 1
- Universal mounting bracket (M) - 1
- Canopy (Cover Plate) (K) - 1
- Sloped Ceiling Adaptor (S)(Q) - 1
- #6-32 x .75 inch machine screws (J) - 2
- #8-32 x 1 inch machine screws (L) - 2
- Allen wrench - 1
- Self-adhesive Arrows - 2

2

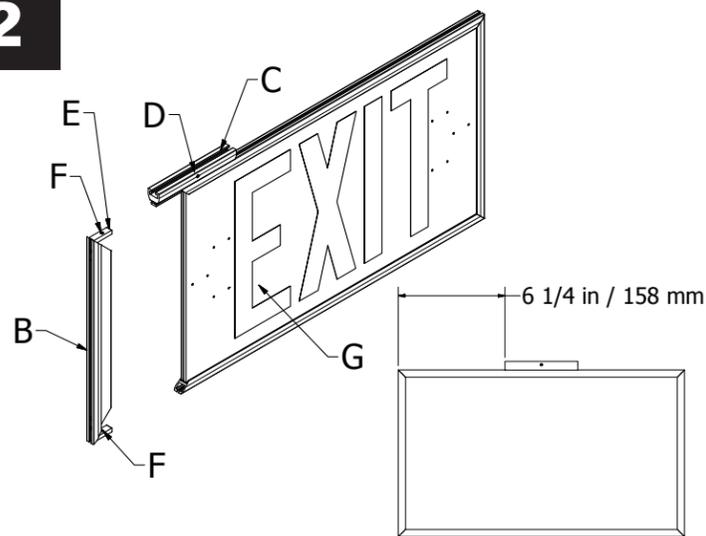


### Sign Reconfiguration


1. If configuring for ceiling mounting, loosen the set screws (F) at the top and bottom corner connectors (E) on one side of the exit sign. 2. Pull on the vertical frame (B) and the corner connectors to remove them from the rest of the exit sign. 3. If configuring for edge mounting, loosen the set screws (F) on the top corner connectors (E) of the exit sign. 4. Pull on the vertical frame (A) and the corner connectors to remove them from the rest of the exit sign. 5. Loosen the set screw (D) inside the standard adaptor (C) and then slide the standard adaptor (C) into the horizontal frame (A) for ceiling mounting or into the vertical frame (B) for edge mounting and tighten the set screw (D) to secure it. 6. If exchanging the photoluminescent sign (G), slide the signs in and out of the open side of the exit sign after completing steps 1 and 2 outlined above. 7. Reverse steps 1, 2 or 3 and 4 to reassemble the exit sign.

### Directional Arrow Application

Use the tiny dots on the left and right sides of the sign to accurately position the self-adhesive arrows as required.

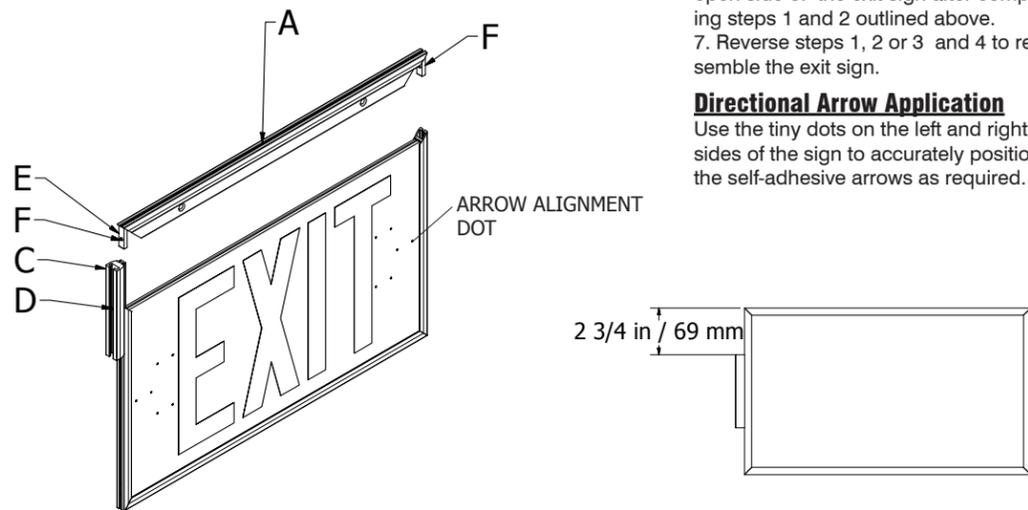


3

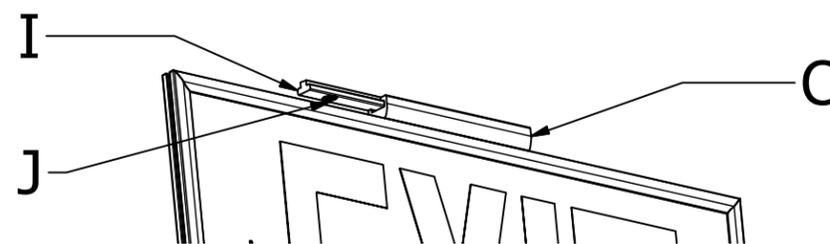

### Ceiling mounted (directly to ceiling or suspended ceiling T bar) / Edge mounted (directly to wall at 90 degree angle)

1. Position the standard adaptor on top of the exit sign for ceiling mounting or on one side of the exit sign for edge mounting (see Sign Reconfiguration Diagram 2). 2. Attach T-bracket (I) to ceiling or T bar or wall using two #6 screws and wall plugs if appropriate (not supplied). 3. Using the supplied Allen wrench back off the set screw on the face of the standard adaptor (C) and slide the standard adaptor (C) together with the exit sign already attached over T-bracket (I). 4. Tighten the set screw loosened in step 2 to secure the exit sign on to the T-bracket (I).

4

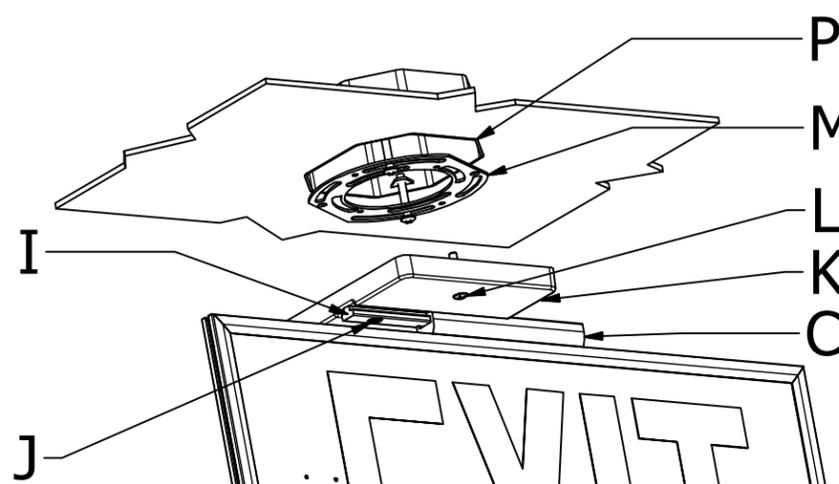


### Retrofit ceiling mounted (over existing octagon box) / Retrofit edge mounted (over existing octagon box wall at 90 degree angle)

1. Position the standard adaptor on top of the exit sign for ceiling mounting or on one side of the exit sign for edge mounting (see Sign Reconfiguration Diagram 2). 2. Attach the universal mounting plate (M) to the octagon box (P). 3. Attach the T-bracket (I) to canopy (K) using the supplied #6-32 x .75 inch machine screws (J). 4. Attach the canopy/T-bracket assembly to the universal mounting plate using #8-32 x 1 inch machine screws (L). 5. Using the supplied Allen wrench back off the set screw on the face of the standard adaptor (C) and slide the standard adaptor (C) together with the exit sign already attached over T-bracket (I). 6. Tighten the set screw loosened in step 2 to secure the exit sign on to the T-bracket (I).

**NOTE: When replacing or removing an electrically-powered exit sign the power must be terminated at the source not in the wall cavity before installing the Ecoglo Exit Sign. Check with the local electrical code requirements first before installation.**


5

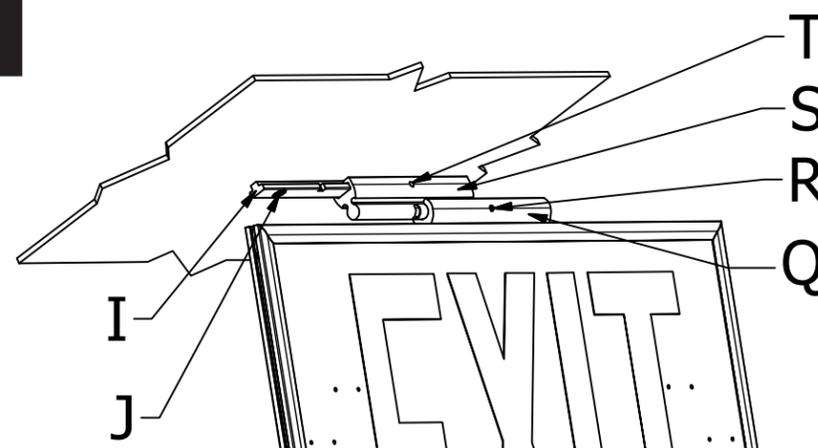

### Sloped ceiling mounted

1. Exchange the standard adaptor (C) with the lower half of the sloped ceiling adaptor (Q). 2. Attach T-bracket (I) to ceiling using two #6 screws and wall plugs if appropriate (not supplied). 3. Using the supplied Allen wrench back off the set screw (T) on the face of the upper half of the sloped ceiling adaptor (S) and slide it over T-bracket (I) installed during step 2. 4. Tighten the set screw (T) loosened in step 3 to secure the upper half of the sloped ceiling adaptor (S) on to the T-bracket (I). 5. Back off the set screw (R) on the face of the lower half of the sloped ceiling adaptor (Q) and slide it together with the exit sign already attached over upper half of the sloped ceiling adaptor (S) installed in step 3. 6. Tighten the set screw (R) loosened in step 5 to secure the exit sign on to the upper half of the sloped ceiling adaptor (S)/T-bracket (I).

6

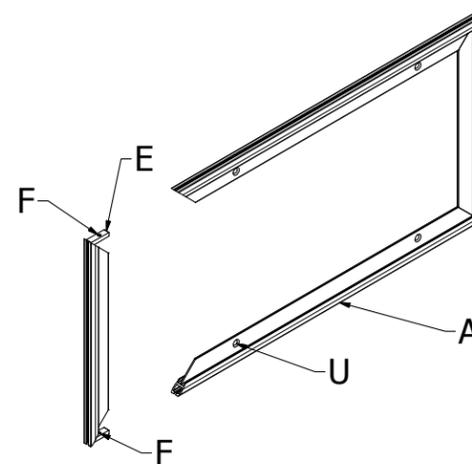

### Surface mounted

1. Remove the standard adaptor and the sign from the exit sign (refer to Diagram 2).. 2. With the sign removed attach the exit sign frame to the wall using # 8 countersunk screws (not supplied) through the 4 holes (U) located along the horizontal frame members (A). 3. Replace the sign into the frame and tighten the set screws (F) in the corner connectors (E).